

Zastępuje modele:

OptimaGSM/AT-GSM-MINI90/O-R3P/PS;5A-7;CB7-12;NPG7-12;TP12-7;NP7-12;NPW36-12;AGM127F;FGB7-12;NPG9-12;TPCG12-9;NPW45-12;F6C350-USB-MAC;

Pasuje do urządzeń:

Zapotek SA1272f003;APC POWERCELL PERSONAL;APC Smart;APC Symmetra LX;Best Power Fortress;Eaton Evolution S;Ever NET 700;Liebert Up Station GXT 2100RT;MGE Pulsar Evolution;Mustek PowerMust 2000;APC 330XT;APC 360SX;APC 600;APC 600R;APC 600RM;APC AP280;APC AP330;APC AP330XT;APC AP360;APC AP360SX;APC AP600;APC AP600RM;APC APC400;APC APC420;APC BE500U;APC BE550;APC BE550G;APC BE700;APC BE700G;APC BH500INET;APC BK250EC;APC BK250EI;APC BK250I;APC BK300MI;APC BK350;APC BK350EI;APC BK400EC;APC BK400EI;APC BK400I;APC BK500;APC BK500EI;APC BK500I;APC BK500MI;APC BK650EI;APC BP280I;APC BP280SI;APC BP420I;APC BP420IPNP;APC BP420SI;APC BR500I;APC BR550GI;APC BX650CI;APC Back;APC Back-UPS 650 BX650CI;APC Back-UPS BR1000;APC Back-UPS BR1500;APC Back-UPS CS BK350;APC Back-UPS CS BK500;APC Back-UPS ES 550 BE550G;APC Back-UPS ES 700 BE700;APC Back-UPS ES 700 BE700G;APC Back-UPS ES BE550;APC Back-UPS Pro w/L5;APC CS350;APC GP1270F2;APC LCR12V6.5;APC MGE Galaxy;APC POWERSHIELD CP15U48D;APC POWERSHIELD CP24U12D;APC POWERSHIELD CP36U52;APC Personal Power;APC Professional Power;APC RackMount 600;APC SC420I;APC SU420INET;APC SUVS420I;APC Smart-UPS SU5000R5XLT;APC SmartUPS VS420;APC Symmetra PX;APC Symmetra tour;APC UPS Symmetra;APC UPS200;APC UPS300;APC UPS370CI;APC UXBP48M;APC UpStart350;ATandT 515;Belkin F6C120AU;Belkin F6C350;Belkin F6C425;Belkin F6C500USB;Belkin F6C800;Belkin F6H650;Belkin Pro F6C425;Belkin Pro F6C525;Belkin Pro F6C625;Belkin Pro F6C650;Belkin Pro F6C700;Belkin Pro GOLD;Belkin Pro Gold;Belkin Pro Net;Belkin Superior F6H500deUNV;Belkin Superior F6H650deUNV;Belkin Universal F6C100deUNV;Belkin Universal F6C120deUNV;Belkin Universal F6C800deUNV;Best Power 280;Best Power 420;Best Power BEST;Best Power PATRIOT;Best Technologies BTG;Best Technologies Fortress;Best Technologies LCR12V6.5BP1;Best Technologies LI660;Best Technologies LI660VA;Best Technologies MD1.5KVA;Best Technologies MD2KVA;Best Technologies PATRIOT;Best Technologies SPS450;Best Technologies SPS450VA;Clary 1000 On;Clary 1800VA;Clary UPS1-1.5K;Clary UPS11251GR;Clary UPS1125K1G;Clary UPS1125K1GSBS;Clary UPS1125K1GSBSR;Clary UPS115K1GR;Clary UPS115K1GSBS;Clary UPS115K1GSBSR;Clary UPS11K1G;Clary UPS11K1GR;Clary UPS11K1GSBSR;Clary UPS1400VA1GSL;Clary UPS1800VA1G;Clary UPS1800VA1GR;Clary UPS1800VA1GSBS;Clary UPS1800VA1GSBSR;Clary UPS23K1GSBSR;Clary UPS800VA1GSBS;Clary I800VA;CyberPower 500SL;CyberPower 525SL;CyberPower 650SL;CyberPower BH1500;CyberPower BP BP48V45ART2U;CyberPower BP BP48V75ART2U;CyberPower CP CP1000AVRLCD;CyberPower CP CP1200AVR;CyberPower CP CP1200D;CyberPower CP CP1285AVRLCD;CyberPower CP CP1350AVRLCD;CyberPower CP CP1500AVRLCD;CyberPower CP CP1500AVRT;CyberPower CP CP525SL;CyberPower CP CP550SL;CyberPower CP CP585LCD;CyberPower CP CP600LCD;CyberPower CP CP685AVR;CyberPower CP CP685AVRLCD;CyberPower CP CP800AVR;CyberPower CP CP825AVRLCD;CyberPower CP CP825LCD;CyberPower CP CP850AVRLCD;CyberPower CP CP900AVR;CyberPower CPS CPS1000AVR;CyberPower CPS

CPS1100AVR;CyberPower CPS CPS1250;CyberPower CPS CPS1500AVRHO;CyberPower
CPS CPS500SL;CyberPower CPS CPS525SL;CyberPower CPS CPS550SL;CyberPower
CPS CPS575SL;CyberPower CPS CPS585AVR;CyberPower CPS
CPS625AVR;CyberPower CPS CPS650SL;CyberPower CPS CPS650VA;CyberPower CPS
CPS700AVR;CyberPower CPS CPS720VA;CyberPower CPS CPS725SL;CyberPower CPS
CPS825AVR;CyberPower CPS1250AVR;CyberPower CPS500SL;CyberPower
CPS575SL;CyberPower CPS585AVR;CyberPower CPS625AVR;CyberPower
CPS650SL;CyberPower CPS700AVR;CyberPower CPS900AVR;CyberPower CS
CS24U12V;CyberPower DX600E;CyberPower DX800E;CyberPower OFFICE
POWER;CyberPower OL OL1500RMXL2U;CyberPower OP OP1250;CyberPower OP
OP1500;CyberPower OP OP650;CyberPower OP OP850;CyberPower OR
OR1500LCDRM2U;CyberPower OR OR1500LCDRTL2U;CyberPower OR
OR2200;CyberPower OR

OR2200LCDRM2U;CyberPower OR OR2200LCDRTL2U;CyberPower OR
OR700LCDRM1U;CyberPower PP PP1500SWT4;CyberPower PP PP2200SW;CyberPower
PP PP800SW;CyberPower PR PR1000LCDRT2U;CyberPower PR
PR1000LCDRTL2U;CyberPower PR PR1000LCDRTL2Ua;CyberPower PR
PR1500LCDRT2U;CyberPower PR PR1500LCDRTL2U;CyberPower PR
PR1500SWRM2U;CyberPower PR PR2200LCDRT2U;CyberPower PR
PR2200LCDRTL2U;CyberPower PR PR2200SWRM2U;CyberPower PR
PR3000LCDRT2U;CyberPower PR PR3000LCDRTL2U;CyberPower PR
PR3000SWRM2U;CyberPower UP UP1200;CyberPower UP UP625;CyberPower UP
UP825;DELL 1000R HV;DELL 1000T EBM;DELL 1000W;DELL 10KW EBM;DELL
10KWOLHVB;DELL 10kW;DELL 10kWR EBM;DELL 1920R EBM;DELL 1920R LV;DELL
1920T HV;DELL 1920W;DELL 2.700W;DELL 2700R EBM;DELL 3.750W;DELL 3750R
EBM;DELL 4.200W;DELL 4200R EBM;DELL 500T HV;DELL 500W;DELL 5600R EBM;DELL
5600R OLHV;DELL 5600W;DELL DL5000RMI5U;DELL DLA1500RMI2U;DELL H914N;DELL
H928N;DELL H952N;DELL H967N;DELL J715N;DELL J718N;DELL J727N;DELL
J728N;DELL J731N;DELL J735N;DELL J739N;DELL K789N;DELL K805N;DELL
K806N;DELL K811N;DELL K812N Line;DELL K812N Online;Data General C4;Data General
L600;Data Shield ST;Dell 1000w Rack;Dell 1000w Tower;Dell 1920w Rack;Dell 1920w
Tower;Dell 2700w Rack;Dell 3750w;Dell 3750w Online;Dell 4200w;Dell 4200w Online;Dell
500w Tower;Dell DL700I;Deltec PRA600;Deltech PRA 400;Deltech PRB220;Deltech
PRB300;Deltech PRM450;Deltech RS;EFI LANGUARD 500;EFI LANGUARD 600;EFI
LANGUARD 675;EPD Grizzly 300VRS;EPD Grizzly 500;EPD Grizzly VRS500;EPE
INTEGRITY IS;Easy Options 400VA;Eaton 3105;Eaton 3S 700VA;Eaton 5110
1000VA;Eaton 5110 1500VA;Eaton 5110 700VA;Eaton 5115 1000VA;Eaton 5115
1400VA;Eaton 5115 500VA;Eaton 5115 750VA;Eaton 5125 1000VA;Eaton 5125
1500VA;Eaton 5125 2200VA;Eaton 5125 6000VA;Eaton 5130 1250VA;Eaton 5130
1750VA;Eaton 5130 2500VA;Eaton 5130 3000VA;Eaton 5130 BAT;Eaton 5P 1150i
Tower;Eaton 5P 1550i Tower;Eaton 5P 650i Tower;Eaton 5P 850i Tower;Eaton 5PX
1500i;Eaton 5PX 2200i;Eaton 5PX 3000i;Eaton 5S 1000i Tower;Eaton 5S 1500i
Tower;Eaton 5S 700i Tower;Eaton 5S1000i;Eaton 5S1500i;Eaton 5S700i;Eaton 5SC
1500G;Eaton 5SC 500G;Eaton 5SC 750G;Eaton 9120;Eaton 9130 1000VA;Eaton 9130
1500VA;Eaton 9130 2000VA;Eaton 9130 3000VA;Eaton 9130 5000VA;Eaton 9130
6000VA;Eaton 9130 Rack;Eaton BladeUPS Batt;Eaton ELP1200DIN;Eaton
ELP1200IEC;Eaton ELP1600DIN;Eaton ELP1600IEC;Eaton ELP650DIN;Eaton
ELP650IEC;Eaton ELP850DIN;Eaton ELP850IEC;Eaton EX 1000 RT2U;Eaton EX
1000VA;Eaton EX 1500 RT2U;Eaton EX 1500VA;Eaton EX 2200VA;Eaton EX
3000VA;Eaton EX 700VA;Eaton EX BAT 1000VA EXB;Eaton EX BAT 1500VA EXB;Eaton

EX BAT 2200VA EXB;Eaton EX BAT 3000VA EXB;Eaton EX RT BAT EX 11 RT EXB;Eaton EX RT BAT EX 5 RT EXB;Eaton EX RT BAT EX 7 RT EXB;Eaton Ellipse ASR;Eaton Ellipse ECO;Eaton Ellipse Max;Eaton Ellipse Pro;Eaton Evolution 1150VA;Eaton Evolution 1550;Eaton Evolution 650;Eaton Evolution 850;Eaton Evolution Kombi;Eaton Protection Station;Emerson 200;Emerson AU-750;Ever DUO II;Ever ECO 500;Ever ECO 700;Ever ECO Pro;Ever NET 1000;Ever NET 2200;Ever NET 500;Ever Net 1400;Ever POWERLINE 10;Ever POWERLINE RT;Ever SINLINE 3000;Ever SPECLINE 700;Ever Sinline 1200;Ever Sinline 3000;Fenex FX2002;Fenton M1000;Fenton M2000;Fenton M3000;Fenton PS60;Fenton Power On;Fenton Power Pal;Fenton Power Pure;Fideltronik Ares 1000;Fideltronik Ares 1600;Fideltronik Ares 3000;Fideltronik Ares 350;Fideltronik Ares 500;Fideltronik Ares 700;Fideltronik Ares Cool;Fideltronik Ares LT1;Fideltronik Ares LT2;Fideltronik Ares LT3;Fideltronik F650 Pro;Fideltronik Lupus 1000;Fideltronik Lupus 1500;Fideltronik Lupus 1600;Fideltronik Lupus 500;Fideltronik Lupus 700;Fideltronik Lupus KI;Fideltronik Lupus KI1000;Fideltronik Lupus KI2000;Fideltronik Lupus KI3000;Fideltronik Lupus KR1000;Fideltronik Lupus KR2000;Fideltronik Lupus KR3000;Fideltronik Lupus KR3110s;Fideltronik Lupus KR6000;Fideltronik MB4814;Fideltronik MB4814RACK;Fideltronik MB4821;Fideltronik Viper 1200;Fideltronik Viper 500;Fideltronik Viper 700;General Power GPS5006;HP APC2IA;HP APC3IA;HP Compaq R1500;HP Compaq UP6003;HP PowerWise 1000;HP PowerWise 1250;HP PowerWise 2100;HP PowerWise L900;HP Powerwise L600;HP R1500XR;Intellipower IQ 1100RM;Leadman UPS 300;Leadman UPS 500;Liebert GXT2;Liebert Up Station D 600VA;Liebert Up Station D PSP 500;Liebert Up Station D S1000MT;Liebert Up Station D S1400MT;Liebert Up Station GXT 00MT;MGE ESV11;MGE ESV8;MGE EXRT 11000;MGE EXRT 5000;MGE EXRT 7000;MGE EXRT EXB;MGE Ellipse 1000;MGE Ellipse 1500;MGE Ellipse ASR;MGE Ellipse Max;MGE Ellipse Premium;MGE Ellipse USBS;MGE Evolution 1100;MGE Evolution 1150;MGE Evolution 1500;MGE Evolution 1550;MGE Evolution 2000;MGE Evolution 2200;MGE Evolution 3000;MGE Evolution 650;MGE Evolution 800;MGE Evolution 850;MGE Evolution S;MGE Galaxy 3500;MGE Protection Center;MGE Pulsar 1000;MGE Pulsar 1500;MGE Pulsar 700;MGE Pulsar EL;MGE Pulsar EL7;MGE Pulsar ESV;MGE Pulsar ESV11;MGE Pulsar ESV14;MGE Pulsar EX;MGE Pulsar EXB;MGE Pulsar EXtreme;MGE Pulsar Extreme;MGE Pulsar M;MGE Pulsar

PSX;Merich 350;Merich 400;Merich 450C;Merich 850C;Merich M1200;Merich UPS400;Mustek PowerMust 745(B);Mustek PowerMust 800;Mustek PowerMust 848;Mustek PowerMust 848EG;NCR UPS 4071-0600;ORVALDI 1052F;ORVALDI 1062F;ORVALDI BL600;ORVALDI JP;ORVALDI JPXL;Oneac 436;Oneac ON1300;Oneac ON2000;Oneac ON400XR;Oneac ON600;Oneac ONe200;Oneac ONe200X;Oneac ONe300;Oneac ONe300X;Oneac ONe400D;Oneac ONm300;Oneac ONm600X;Oneac Series E;Oneac UP;Opti 1300;Opti 1BP107;Opti 1BP207;Opti 1BP407;Opti 1BP607;Opti 2000;Opti 280 ES;Opti 280E;Opti 350059;Opti 350VS;Opti 400XR;Opti 420E;Opti 500VS;Opti 600;Opti 800PS;Opti 900;Opti BT;Opti BT2PAC;Opti BT4PAC;Opti ON1300;Opti ON1300XRA;Opti ON2000;Opti ON2000XRA;Opti ON400XR;Opti ON400XRA;Opti ON600;Opti ON600XRA;Opti ON900;Opti ON900XRA;Opti ON910;Opti ONEBP107;Opti ONEBP207;Opti ONEBP407;Opti ONEBP607;Opti UP1103;PCM Powercom KIN;Pakiet APC RBC109;Pakiet APC RBC110;Pakiet APC RBC113;Pakiet APC RBC115;Pakiet APC RBC116;Pakiet APC RBC12;Pakiet APC RBC123;Pakiet APC RBC124;Pakiet APC RBC124HR;Pakiet APC RBC12J;Pakiet APC RBC132;Pakiet APC RBC133;Pakiet APC RBC17;Pakiet APC RBC2;Pakiet APC RBC22;Pakiet APC RBC23;Pakiet APC RBC24;Pakiet APC RBC24J;Pakiet APC RBC25;Pakiet APC RBC26;Pakiet APC RBC27;Pakiet APC RBC31;Pakiet APC RBC32;Pakiet APC RBC33;Pakiet APC RBC37;Pakiet APC RBC38;Pakiet APC RBC40;Pakiet APC RBC48;Pakiet APC RBC49;Pakiet APC

RBC5;Pakiet APC RBC51;Pakiet APC RBC53;Pakiet APC RBC54;Pakiet APC RBC59;Pakiet APC RBC60;Pakiet APC RBC62;Pakiet APC RBC63;Pakiet APC RBC8;Pakiet APC RBC9;Pakiet APC SYBT3;Pakiet APC SYBT4;Pakiet APC SYBT5;Pakiet APC SYBTU1;Pakiet APC SYMMETRA;Pakiet APC TBC101;Pakiet APC TBC102;Pakiet APC TBC27;Pakiet APC TBC3;Pakiet APC TBC30;Pakiet APC TBC31;Pakiet APC TBC32;Pakiet APC TBC33;Pakiet APC TBC44;Pakiet APC TBC49;Pakiet APC TBC5;Pakiet APC TBC50;Pakiet APC TBC7;Pakiet APC TBC91;Pakiet APC TBC98;ParaSystems A750;ParaSystems Minuteman 1000;ParaSystems Minuteman 250;ParaSystems Minuteman 300CP;ParaSystems Minuteman 300SS;ParaSystems Minuteman 450;ParaSystems Minuteman 600;ParaSystems Minuteman 60022;ParaSystems Minuteman 600SS;ParaSystems Minuteman 900SS;ParaSystems Minuteman A300;ParaSystems Minuteman A300L;ParaSystems Minuteman A425;ParaSystems Minuteman A750;ParaSystems Minuteman AT650;PowerWalker VI 1200 LCD UPS;PowerWalker VI 2000 LCD UPS;PowerWalker VI 750 PSW UPS;Powerware 5155;Powerware EMB9120;Powerware FX2002;Powerware OneUPS;Powerware PLUS 6;Powerware PW3110 425VA;Powerware PW3110 550VA;Powerware PW3110 600VA;Powerware PW3110 700VA;Powerware PW3110;Powerware PW3115 300VA;Powerware PW3115 420VA;Powerware PW3115;Powerware PW5105 450VA;Powerware PW5105;Powerware PW5110 1000VA;Powerware PW5110 1500VA;Powerware PW5110 700VA;Powerware PW5115 1000VA;Powerware PW5115 1400VA;Powerware PW5115 500VA;Powerware PW5115 750VA;Powerware PW5115;Powerware PW5119 1000VA;Powerware PW5119 1500VA;Powerware PW5119;Powerware PW5125 1000VA;Powerware PW5125 1500VA;Powerware PW5125 2200VA;Powerware PW5125 5000VA;Powerware PW5125 6000VA;Powerware PW5130 1250VA;Powerware PW5130 1750VA;Powerware PW5130 2500VA;Powerware PW5130 3000VA;Powerware PW9110 1000VA;Powerware PW9110 1500VA;Powerware PW9110 2000VA;Powerware PW9110 3000VA;Powerware PW9110 5000VA;Powerware PW9110 6000VA;Powerware PW9110 700VA;Powerware PW9120 1000VA;Powerware PW9120 1500VA;Powerware PW9120 2000VA;Powerware PW9120 3000VA;Powerware PW9120 5000VA;Powerware PW9120 6000VA;Powerware PW9120 700VA;Powerware PW9120;Powerware PW9125 1000VA;Powerware PW9125 1500VA;Powerware PW9125 2000VA;Powerware PW9125 3000VA;Powerware PW9125 5000VA;Powerware PW9125 6000VA;Powerware PW9125 700VA;Powerware PW9130 1000VA;Powerware PW9130 1500VA;Powerware PW9130 2000VA;Powerware PW9130 3000VA;Powerware PW9130;Safe 650;Safe SM650;Scooter SPS500AT;Sola 0510;Sola 054-00210;Sola 2993638601;Sola 305;Sola 310A;Sola 600VA;Sola 900VA;Sola N900;Sola NETWORK UPS;Sola S24K2U48BAT;Sola S31000;Sola S31000R;Sola S314000;Sola S31400R;Sola S32200R;Sola S370;Sola S3700;Sola S3700R;Sola S41000;Sola S41000TRM;Sola S41500TRM;Sola S4700;Sola S4K2U2000;Toshiba 1200 3;Toshiba 1200 5KVA;Toshiba 1200 Model;Toshiba 1200 SER;Toshiba 1400SE Plus;Toshiba 5KVA 208;Toshiba 5KVA 240;Toshiba 750;Toshiba ECB1U12030U;Toshiba PR00015P31;Triad UPS600;Tripp Lite 360SX;Tripp Lite 500;Tripp Lite 600;Tripp Lite 850;Tripp Lite BC;Tripp Lite BC200;Tripp Lite BC250;Tripp Lite BC250A;Tripp Lite BC300;Tripp Lite BC325;Tripp Lite BC325A;Tripp Lite BC3348;Tripp Lite BC400;Tripp Lite BC400INT;Tripp Lite BC420;Tripp Lite BC450;Tripp Lite BC500LAN;Tripp Lite CP;Tripp Lite Datashield;Tripp Lite Internet;Tripp Lite MISC;Tripp Lite MPS;Tripp Lite OM1995;Tripp Lite OMNI;Tripp Lite Office;Tripp Lite PS6.0;Tripp Lite SMART;Tripp Lite TE1200;Tripp Lite TE700;Tripp Lite Unison;Unison MPS1200;Unison MPS1200A;Unison MPS1500;Unison PS6;Unison PS60;Unisys MPS1400;Unisys MPS2000;Unisys PS6.0N;Unisys PS60;Unisys PS700;Unisys PS8.0;Unisys PS8.0N;Unitek Alpha 650;Unitek Blue 700;Unitek Delta 1400;Unitek Delta 3000;Unitek EXL 700;Unitek Epsilon 2000;Unitek

MB Cube;Unitek MB Cube S;Upsonic CS 1500;Upsonic CS 3000;Upsonic CXR 1500;Upsonic CXR 3000;Upsonic DS 1400;Upsonic DS 2000;Upsonic DS 800;Upsonic ESLR 15;Upsonic ESLR 20;Upsonic ESLR 30;Upsonic ESLR 50;Upsonic ESLR 75;Upsonic ESRT 20;Upsonic ESRT 50;Upsonic EST 20;Upsonic IP 10000;Upsonic IS 2000;Upsonic IS 3000;Upsonic LAN 100;Upsonic LAN 150;Upsonic Might 35;Upsonic Orion 750;Upsonic PC Mate 55;Upsonic PC Might 35;Upsonic PC Might 55;Upsonic PCM 140;Upsonic PCM 140VR;Upsonic PCM 200;Upsonic PCM 200VR;Upsonic PCM 35;Upsonic PCM 55;Upsonic PCM 55R;Upsonic Station 140;Upsonic Station 200;Upsonic Station 28;Upsonic Station 40;Upsonic Station 60;Upsonic System 100;Upsonic System 300;Upsonic System 60;Upsonic UPS 1250;Upsonic UPS 200;Upsonic UPS 600;Zapotec RX;Zapotec RX501N;Zapotec RX510N;Siemens Cerberus Pro;Siemens FC-1002;Siemens FC-1004;Siemens FC-1008;Siemens FC-1012;Siemens FC721;Siemens FH7202;Siemens FH7203;Siemens FT724;Bosch FPC-500;Action ACTIO AC2299;Action Actio AC4934;Action Actio AC9526;ActiveJet AJE;APC 500 CS;APC BACK 500;Belkin OmniGuard 1100;Belkin OmniGuard 1500;Belkin OmniGuard 2300;Belkin Regulator Pro;Best Power FERRUPS;Best Technologies LI;Crow Runner 4;Crow Runner 8;Cyberpower Cyber Shield;Cyberpower OFFICE POWER;Cyberpower Office Power;Cyberpower PR1500;Data Shield T2200;DSC AWO 000;DSC AWO 150;DSC HS2016;DSC MSP-00;DSC MST-00;DSC PC 1616;DSC PC 1832;EBS CALLISTO CPX200NW;Elmes CBP32;Elmes CBP32S;Elsist 1800 VA;Ever DUO PRO;Ever POWERLINE 6;Fideltronic ARES 500;Fideltronic ARES 1000;Fideltronic ARES 1600;Fideltronic ARES 3000;Fideltronik Inigo Lupus;Fish Finder FF668C;Fish Finder FF688C;Garmin Fishfinder 350C;Garmin Striker 4cv;Garmin Striker 5cv;Gembird Line;Gembird POWER CUBE;Genevo Prima6;Genevo Prima12;Genevo Prima16;Genevo PrimaEXT;Honeywell FLEX20;Honeywell FLEX50;Honeywell FLEX100;Honeywell NX1MPS;Honeywell NX2MPS;Honeywell NX3MPS;Honeywell PRO22ENC1;Honeywell PRO22ENC2;Honeywell PRO32E1EN;Honeywell PRO32E2EN;Ibiza PORT210VHF;IPS TM-LI;Jablotron JA;Kraft&Dele KD136;Kraft&Dele KD144;Kraft&Dele KW6500;Kwazar NEPTUN 15L;Liebert PowerSure Interactive;Liebert PowerSure Personal;Liebert PowerSure Proactive;Liebert Up Station GXT 1000MT;Liebert Up Station GXT 1000RT;Liebert Up Station GXT 1000RTE;Liebert Up Station GXT 1500RT;Liebert Up Station GXT 2000RT;Liebert Up Station GXT 3000RT;Lowrance Elite 5;Lowrance Elite 7;Lowrance HDS;Lowrance Hook 3X;Lowrance Hook 4X;MarolexRX 12L;Mean Well DRC;Mean Well ZBF-R;Merawex MZB212;Merawex ZBS-12V3A;MGE ES8;MGE ESV13;MGE ESV14;MGE Pulsar ES;Monacor SPEECH;Monacor TXA;MPL OC20;MPL OC40;MPL OC50;Mustek PowerMust 1188S;Mustek PowerMust 1400;Mustek PowerMust 1590;Mustek PowerMust 2012;Mustek PowerMust 2212;Mustek PowerMust 3024;Mustek PowerMust PM;Paradox 728ULT;Paradox E55;Paradox E65;Paradox SP5500;Paradox SP6000;ParaSystems Minuteman Rack;Polon-Alfa WPO;Pulsar ARAD;Pulsar ARAD2;Pulsar ARAD2S;Pulsar AWO;Pulsar AWO000EI;Pulsar AWO000PU;Pulsar AWO003;Pulsar AWO003EI;Pulsar AWO003PU;Pulsar AWO004;Pulsar AWO005;Pulsar AWO005EI;Pulsar AWO005PU;Pulsar AWO006;Pulsar AWO008;Pulsar AWO008EI;Pulsar AWO009;Pulsar AWO039;Pulsar AWO137;Pulsar AWO150;Pulsar AWO150EI;Pulsar AWO150PU;Pulsar AWO151;Pulsar AWO152;Pulsar AWO152EI;Pulsar AWO152PU;Pulsar AWO400;Pulsar AWO505PU;Pulsar AWO513;Pulsar AWO514;Pulsar AWZ;Pulsar AWZ101;Pulsar AWZ110;Pulsar AWZ200;Pulsar AWZ224;Pulsar AWZ230;Pulsar DSB54;Pulsar DSB98;Pulsar DSFB108;Pulsar HPSB1348B;Pulsar HPSB1512B;Pulsar HPSB1824B;Pulsar HPSB2512B;Pulsar HPSB2548B;Pulsar HPSB3512B;Pulsar HPSB3524B;Pulsar HPSBOC251B;Pulsar HPSBOC1824B;Pulsar HPSBOC2548B;Pulsar MSRD2012;Pulsar POE042418B;Pulsar POE042455B;Pulsar POE0448B;Pulsar POE044812B;Pulsar POE084824B;Pulsar PSB;Pulsar PSBEN2012B;Pulsar PSBEN2024B;Pulsar PSBOC351225;Pulsar PSBOC501235;Pulsar PSBOC502418;Pulsar PSBOC751250;Pulsar

PSBOC752425;Pulsar PSBOC754813;Pulsar PSBOC1001270;Pulsar PSBOC1002435;Pulsar PSBOC1552455;Pulsar PSBOC1554828;Pulsar PSBOC3004850;Pulsar PSBOC15512110;Pulsar PSBOC30024100;Pulsar PSBS1012B;Pulsar PSBS2012B;Pulsar PSBS2024B;Pulsar PSBSH1012B;Pulsar PSBSH2012B;Pulsar PSBSOF10A12;Pulsar PSBSOF1012;Pulsar PSBSOF1024;Pulsar PSBSOF2012;Pulsar PSBSOF2024;Pulsar PSBSOF3012;Pulsar PSBSOF3024;Pulsar PSBSOF5012;Pulsar PSBSOF5024;Pulsar Rack 19;Pulsar ROUPS12VR;Pulsar ROUPS24V;Pulsar ROUPS48V;Pulsar RSFUPS54R;Pulsar RSFUPS98R;Pulsar RSFUPS108;Pulsar RSFUPS108R;Pulsar RSFUPS116;Pulsar RSFUPS116R;Pulsar RSUPS54;Pulsar RSUPS98;Pulsar RUPS812P;Pulsar RUPS812T;Pulsar RUPS824P;Pulsar RUPS824T;Pulsar RUPS848P;Pulsar RUPS848T;Pulsar S54;Pulsar SF116;Pyronix Matrix 6;Pyronix Matrix 424;Pyronix Matrix 832;Pyronix Matrix PCX46S;Raymarine

Dragonfly 5;Risco PRO24;Risco RM432KP;Risco RP432M;Roger CPR 32;Roger MC16;Roger MC16PAC;Roger MC16-RAW;Roger MCT82M-IO;Roger MCX402-1;Roger MCX402-2;Roger ME-14;Roger ME;Roger PR402DR;Ropam Basicgsm;Ropam PSR-ECO;Ropam SATEL DSC;SATEL 10;SATEL ACC-KP;SATEL ADR;SATEL APS;SATEL CA;SATEL CA4V1;SATEL CA5;SATEL CA6;SATEL CA10;SATEL CA10E;SATEL CA64;SATEL CA64E;SATEL E;SATEL EPS;SATEL GSMLT;SATEL Integra 24;SATEL INTEGRA 32;SATEL Micra;SATEL MST1;SATEL O;SATEL OPS;SATEL OPU;SATEL PERFECTA 16;SATEL PP;SATEL PTSA;SATEL SM;SATEL SR;SATEL Versa 5;SATEL Versa 10;SATEL Versa 15;SATEL Versa IP;SATEL Versa PLUS;SATEL VERSA-5;SATEL VERSA;SATEL VGM;Smart UPS SU1000R2BX120;Smart UPS SU1000RM2U;UTC 1X-F2;UTC 1XF4;UTC 1X-F8;UTC 2X-F2;UTC ATS Classic;UTC ATS Master;UTC FP402;UTC FP404;UTC FP604;UTC FP1500;UTC PG822;UTC PG825;UTC PM811N;UTC PM844;UTC PM861;UTC PM862;UTC PM863;UTC PM865;Valert VAC;VOLT Micro 600;VOLT Micro 1000;VOLT Micro 1200;VOLT MicroSine 1000;VOLT PICO UPS;VOLT Sinuspro;Pulsar AWO000;Pulsar AWO220;SATEL Versa;Belkin OmniGuard 3200;Belkin BERBC31;Belkin BERBC35;Belkin BU306000;Belkin BU308000;Belkin FC61000;Belkin F6C127-BAT;Belkin F6C1270-BAT;Belkin F6C1272-BAT;Belkin F6C1500-TW;HP 1500 G2;HP 1500 G3;HP T1500 G2;HP T1500 G3;Kebo UPS;Kebo SU1K;Kebo SU1KB;Kebo SU2K;Kebo SU2KB;Kebo SU3K;Kebo SU3KB;Kebo SU6K;Kebo SU6KB;Kebo SU10K;Kebo SU10KB;Kebo PHT1101;Kebo PHT1102;Kebo PHT1101B;Kebo PHT1102B;EPL 7.2;HP T1000J;HP T1500J;Belkin F6C129;Belkin F6C450;Merawex ZBS;AROS A7B16 SB;EBS OBDNA;Garmin Striker 5dv;Genevo BOX;Humminbird Piranha max;INIM BPS;INIM SPS;Pulsar AWO000 (;Pulsar AWO000 AWO009;Risco PRO116;Risco PRO128;SVM 24V;ActiveJet 1600 VA;ActiveJet 2200 VA;ActiveJet 424;ActiveJet 500 VA;ActiveJet 550 Sinus;ActiveJet 626;ActiveJet 650;ActiveJet 700VA LED;CB 7;BP 7;AM 7;EC 7;HV 7;EH 7;EGR 6.5;EV 9;EH 9;Armac 1000E HOME;Armac 1000E OFFICE;Armac 1000F HOME;Armac 1000F OFFICE;Armac 650E HOME;Armac 650E OFFICE;Armac 650F HOME;Armac 650F OFFICE;Powersonic PS;