

## Zastępuje modele:

2A-1;2A-2;5A-1;5A-2;STAM-BOX;STAM-IRS;BP17-12;CB12-17;CB12-18;EP17-12;EVX-12170;EVX12170B1;EVX-12170B3;EVX12170;EVX12170B1;EVX12170B3;FGB18-12;GP12170;GP12170;GP12170B1;GP12170B3;HXS12-18;NP17-12;NPC17-12;NPG18-12;TP12-18;

## Pasuje do urządzeń:

Powerware PW5119 3000VA;APC Smart;APC Back;APC DLA3000I;APC SMARTCELL MX3000W;APC SMARTCELL MX5000W;APC SMT3000I;APC SUA3000I;APC SUA3000XL;APC SUA3000XLI;APC SUA3000XLT;Dell DLA1500I;Dell SmartUPS DLA1500I;Dell SmartUPS DLA2200I;Dell SmartUPS DLA750I;MGE Pulsar ESV;MGE Pulsar ESVB;Pakiet APC RBC11;Pakiet APC RBC11J;Pakiet APC RBC50;Pakiet APC RBC55;Pakiet APC RBC7;Pakiet APC TBC40;Pakiet APC TBC70;Powerware PW5105 1500VA;Powerware PW5119 1500VA;Powerware PW5119 2400VA;Siemens Cerberus Pro;Siemens FH7203;Crow Runner 4;Crow Runner 8;DSC HS2016;DSC PC 1616;DSC PC 1832;Elmes CBP32;Elmes CBP32S;Genevo Prima6;Genevo Prima12;Genevo Prima16;Genevo PrimaEXT;Jablotron JA;Mean Well DRC;Mean Well ZBF-R;MPL OC40;Paradox 728ULT;Paradox E55;Paradox E65;Paradox SP5500;Paradox SP6000;Polon-Alfa WPO;Pulsar AWO;Pulsar DSB54;Pulsar DSB98;Pulsar DSFB108;Pulsar MSRD2012;Pulsar PSB;Pulsar PSBOC351225;Pulsar PSBOC501235;Pulsar PSBOC502418;Pulsar PSBOC751250;Pulsar PSBOC752425;Pulsar PSBOC754813;Pulsar PSBOC1001270;Pulsar PSBOC1002435;Pulsar PSBOC1552455;Pulsar PSBOC1554828;Pulsar PSBOC3004850;Pulsar PSBOC15512110;Pulsar PSBOC30024100;Pulsar PSBSOF10A12;Pulsar PSBSOF1012;Pulsar PSBSOF1024;Pulsar PSBSOF2012;Pulsar PSBSOF2024;Pulsar PSBSOF3012;Pulsar PSBSOF3024;Pulsar PSBSOF5012;Pulsar PSBSOF5024;Pulsar Rack 19;Pulsar ROUPS12VR;Pulsar ROUPS24V;Pulsar ROUPS48V;Pulsar RSFUPS54R;Pulsar RSFUPS98R;Pulsar RSFUPS108;Pulsar RSFUPS108R;Pulsar RSFUPS116;Pulsar RSFUPS116R;Pulsar RSUPS54;Pulsar RSUPS98;Pulsar RUPS812P;Pulsar RUPS812T;Pulsar RUPS824P;Pulsar RUPS824T;Pulsar RUPS848P;Pulsar RUPS848T;Pyronix Matrix 6;Pyronix Matrix 424;Pyronix Matrix 832;Risco PRO24;Roger CPR 32;Ropam Basicgsm;Ropam PSR-ECO;SATEL 10;SATEL ACC-KP;SATEL ADR;SATEL CA4V1;SATEL CA5;SATEL CA6;SATEL CA10;SATEL CA10E;SATEL CA64;SATEL CA64E;SATEL E;SATEL EPS;SATEL GSMLT;SATEL Integra 24;SATEL INTEGRA 32;SATEL MST1;SATEL O;SATEL OPS;SATEL OPU;SATEL PP;SATEL PTSA;SATEL SM;SATEL SR;SATEL Versa 5;SATEL Versa 10;SATEL Versa 15;SATEL VGM;UTC ATS Classic;UTC ATS Master;UTC PG822;UTC PG825;UTC PM844;UTC PM861;UTC PM862;UTC PM863;UTC PM865;VOLT Sinuspro;Pulsar AWO220;SATEL CA;Pulsar EN54;APC Smart-UPS SU1000 RACK;Honeywell MB;Intex 400W;Pulsar PRO32-PULS;Pulsar PSBOC30012200;UTC FP2864C;APC SUA2200I;DSC AWO 220;DSC MSP10;DSC MSP-20;DSC MST-10;DSC MST-20;DSC PC 1404;DSC PC 1864;DSC PC 4020;EBS PX 202A;Genevo BOX;Genevo Prima64;HONDA SOLO 560;Honeywell C048;Honeywell C081;Honeywell C096;Honeywell C264;Honeywell C520;Honeywell FLEX20LARGE;Honeywell P025;Honeywell P026;INIM BPS;INIM SPS;Merawex MZB-212;Merawex MZB-312;Merawex MZB-412;Merawex OA2x65;Merawex ZBS-12V3A;Merawex ZBS-12V5A;Merawex ZSP 135-DR;MPL OC40-172/CA;MW Power ZBF-12V;MWPOWER ZP135;Paradox EVO48;Paradox EVO192;Paradox HUB2;Paradox PGM4;Paradox SP4000;Paradox SP7000;Paradox ZX4;Paradox ZX8;Polon-Alfa Polon 6000 WPO;Pos Power PZB;POWERMAT PM-AGR;Pulsar ARAD;Pulsar ARAD3;Pulsar ARAD3S;Pulsar ARAD4S;Pulsar AWO191;Pulsar AWO200;Pulsar AWO200EI;Pulsar AWO200K;Pulsar AWO200PU;Pulsar AWO203;Pulsar AWO205;Pulsar AWO205EI;Pulsar AWO205PU;Pulsar AWO207KON;Pulsar AWO213;Pulsar AWO214;Pulsar AWO214PU;Pulsar AWO220 AWO200;Pulsar AWO220EI;Pulsar AWO220K;Pulsar AWO220PU;Pulsar AWO221;Pulsar AWO224;Pulsar AWO229;Pulsar AWO232;Pulsar AWO232EI;Pulsar AWO232PU;Pulsar AWO250;Pulsar AWO250PU;Pulsar AWO256;Pulsar AWO256PU;Pulsar AWO257;Pulsar AWO259KON;Pulsar AWO261;Pulsar AWO268;Pulsar AWO269PU;Pulsar AWO270;Pulsar AWO278;Pulsar AWO300;Pulsar AWO305PU;Pulsar AWO317;Pulsar AWO401;Pulsar

AWO402;Pulsar AWO500;Pulsar AWO500PU;Pulsar AWO510;Pulsar AWO510PU;Pulsar AWO510VA;Pulsar AWO515;Pulsar AWO610;Pulsar AWO612;Pulsar AWO612P;Pulsar AWO612PW;Pulsar

AWO613;Pulsar AWO613P;Pulsar AWO613PW;Pulsar AWO614P;Pulsar AWO614PW;Pulsar AWO620;Pulsar AWO622;Pulsar AWO622P;Pulsar AWO622PW;Pulsar AWO623;Pulsar AWO623P;Pulsar AWO623PW;Pulsar AWO624;Pulsar AWO624P;Pulsar AWO624PW;Pulsar AWZ201;Pulsar AWZ222;Pulsar AWZ300;Pulsar AWZ333;Pulsar EN54-7A17;Pulsar HPSB10A24C;Pulsar HPSB11A12C;Pulsar HPSB20A12C;Pulsar HPSB1248C;Pulsar HPSB2512C;Pulsar HPSB2548C;Pulsar HPSB3512C;Pulsar HPSB3524C;Pulsar HPSB5048C;Pulsar HPSB5512C;Pulsar HPSB5524C;Pulsar HPSB7012C;Pulsar HPSBOC10A24C;Pulsar HPSBOC11A12C;Pulsar HPSBOC3512C;Pulsar HPSBOC3524C;Pulsar HPSBOC5048C;Pulsar HPSBOC5524C;Pulsar HPSBOC7012C;Pulsar MS 1512;Pulsar MS 2512;Pulsar MSR 1512;Pulsar MSR 2512;Pulsar MSRK 1512;Pulsar MSRK 2512;Pulsar POE0848C;Pulsar POE1648C;Pulsar PSBEN3012C;Pulsar PSBEN5012C;Pulsar PSBEN5024C;Pulsar PSBS10A12C;Pulsar PSBS3012C;Pulsar PSBS3024C;Pulsar PSBS5012C;Pulsar PSBS5024C;Pulsar PSDCB05125C;Pulsar PSDCB09129C;Pulsar PSUPS10A12C;Pulsar PSUPS10A12CR;Pulsar PSUPS10A12CRT;Pulsar PSUPS20A12CR;Pulsar PSUPS20A12CRT;Pulsar RAWO7;Pulsar ROUPS12V;Pulsar RUPS1612RP;Pulsar RUPS1612RT;Pulsar S54;Pulsar S98;Pulsar SF108;Pulsar SF116;Pyronix Matrix 816;Roger MC16-PAC;Roger ME;Roger PR402;SATEL APS;SATEL CSP;SATEL Integra 64;SATEL Integra 128;SATEL Integra 256;SATEL OMI;SATEL PSP;SATEL VERSA-10;SATEL VERSA-15;Telmor TCA;Texecom Premier 48;Texecom Premier 88;Texecom Premier 168;Texecom Premier 412;Texecom Premier 640;Texecom Premier 816;Texecom Premier 832;UTC 2X-F1;UTC FP1216C;UTC PM812N;Vermeire Rapido;VOLT SINUS PRO;SATEL VERSA;AM 18;AMG 17;BP 18;EC 17;EH 17;EPL 17;GP 12170;HV 17;MW 18